
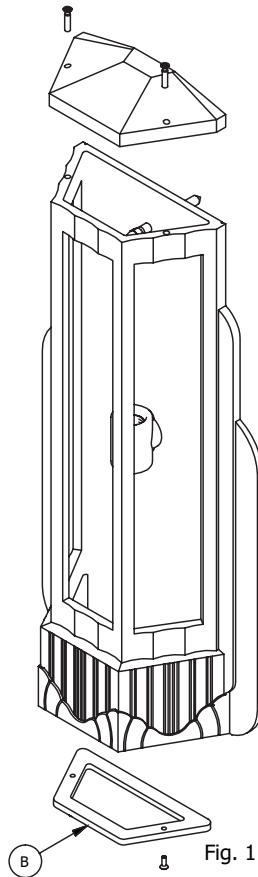


Chrysler
UA0308 EL

Warning:
Risk of fire and electrical shock.

Caution:
Turn off power at main electrical box before installation.

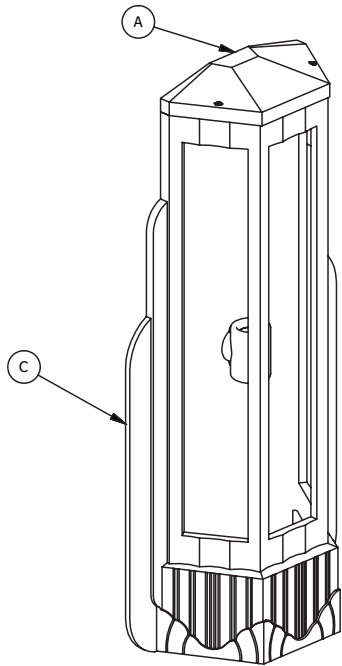

Parts

- A.Top
- B.Bottom
- C.Body
- D.Anchor bolts

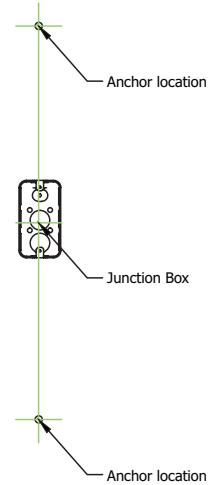


Fig. 2

1. Unscrew and remove the Top (A) and bottom(B) from the Chrysler body(C) (Fig.1)

2. Install the anchor bolts (D) to the wall. Confirm measurement between holes in the backplate . (Fig.2)

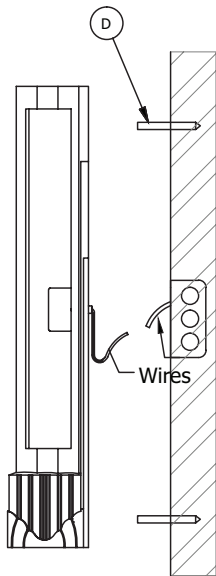


Fig.3

3. Connect the loose wires from the back of the light with the wires from the junction box black to black ,white to white and ground wire. Push the connected wires inside the junction box.(Fig.4)

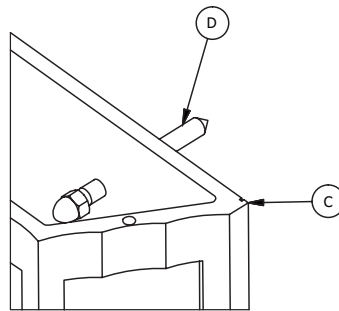


Fig.4

4. Slide the Chrysler body(C) onto the Anchor bolts (D) on the wall, and secure them with the cap nuts. (Fig.4)

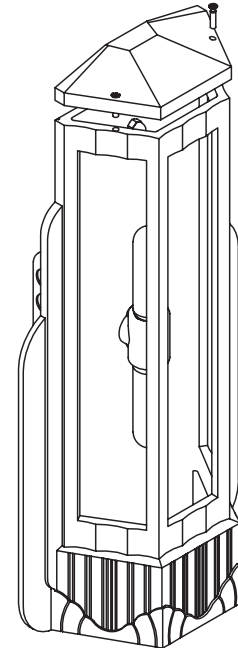


Fig.5

5. After putting the bulbs into the sockets. Screw the Bottom (B) and the Top (A) back onto the Chrysler body (C).(Fig.5)