

Fig. 1

Parts	
A.	Universal Plate
B.	Canopy
C.	Knurled Nut
D.	Diffuser
E.	Difusser Bracket

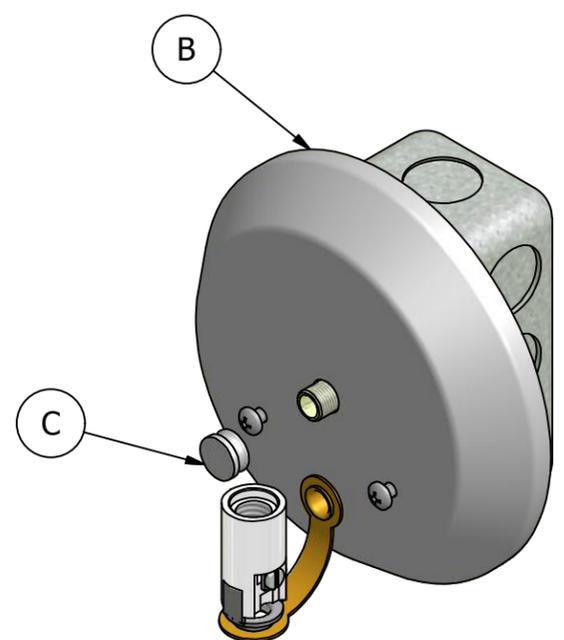


Fig. 2

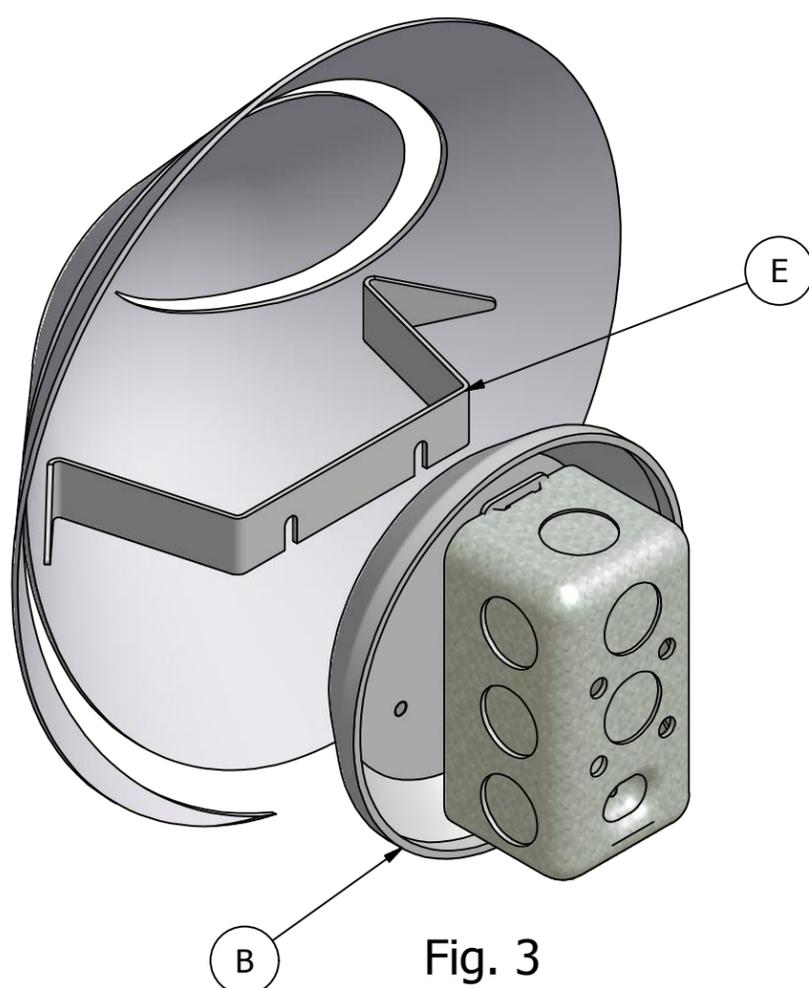


Fig. 3

Instructions Assembly

1. Screw the universal plate (A) to the Junction box. Fig.1.
2. Gently take out the wires from the back of canopy (B) and connect them with the wires from the junction box.
3. When the wires are connected slide the canopy (B), in to the nipple and secure with the knurled nut (C).Fig.2.
4. Slide the bracket diffuser (E) over the screws on the canopy top (B). Fig. 3.