



# LED light engine installation for Flushmounts

**Caution:**  
Disconnect power before installation.

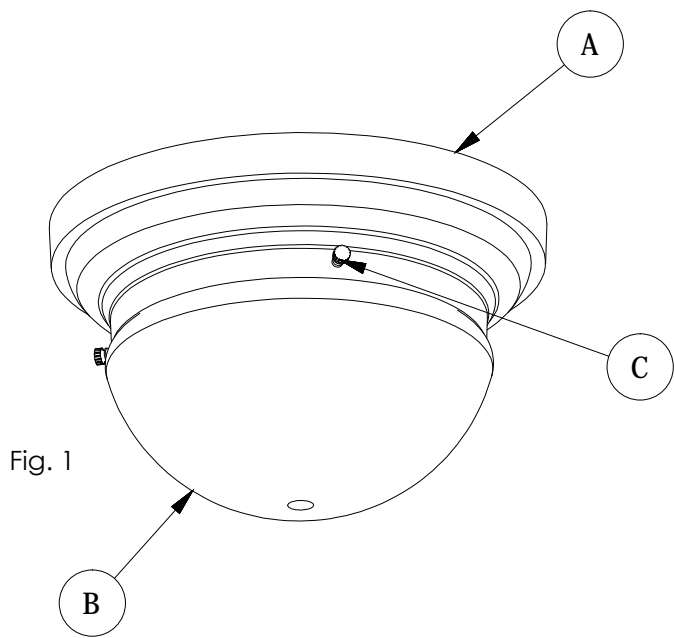

**Parts:**

- A. Canopy
- B. Glass shade
- C. Shade set screws
- D. LED light engine
- E. Connector
- F. Cap nut

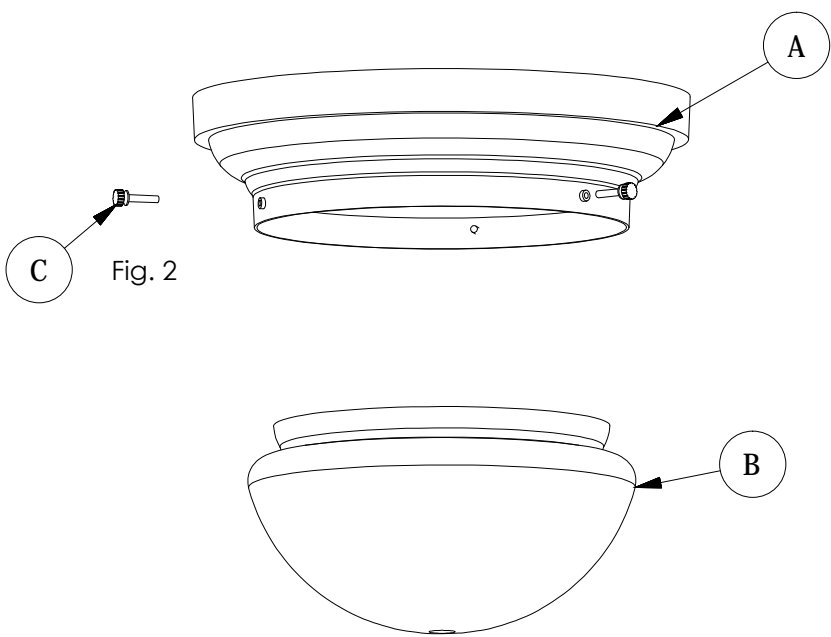

1. Unscrew the shade set screws (C) from the canopy (A). Set aside the glass shade (B) while replacing the LED light engine (D). (Fig. 2)
2. Push the tab to unlock connector (E) (Fig. 3) from LED light engine (D).
3. Unscrew the cap nuts (F) (Fig. 4-5) on the LED Light engine (D) then remove the LED light engine (D) (Fig. 6) and replace for the new one.
4. Reverse steps to install the new LED light engine.

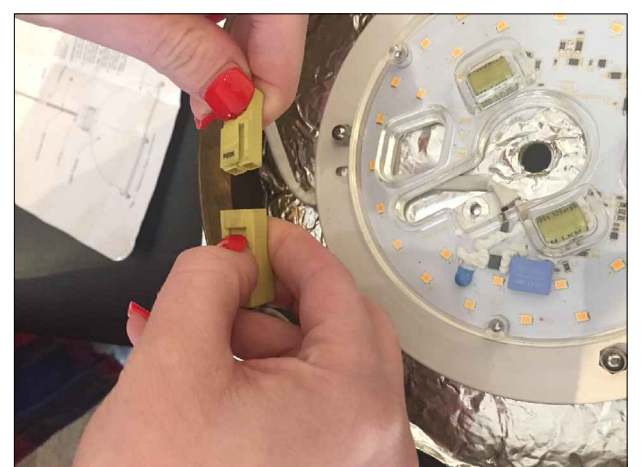
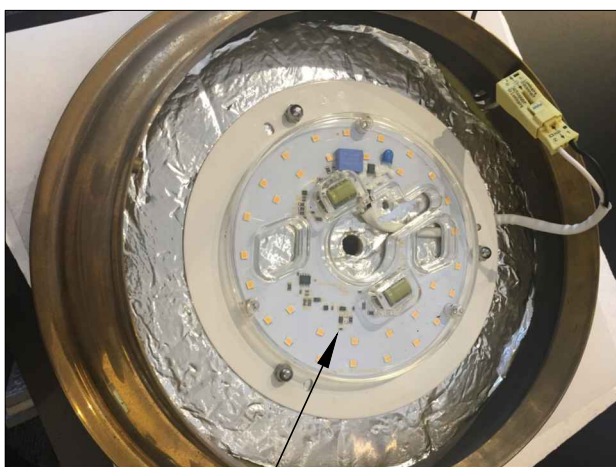


Fig. 3



Fig. 4

Fig. 5

Fig. 6

PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF URBAN ARCHAEOLOGY ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF URBAN ARCHAEOLOGY IS PROHIBITED.

**urban ARCHAEOLOGY**  
© 2010 Urban Archaeology www.urbanarchaeology.com

Dome 11in - LED light engine installation

Scale: NS 11.02.17

pg 1

UA0751-11 F