



Assembly Instructions for Empire (UA0053 IS)




1. Dismantle the fixture.
Mount the backplate to the junction box. Pull wires through hole in backplate.

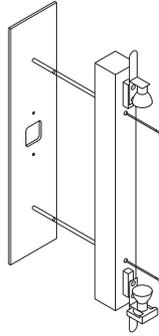


2. Connect wires and fasten the fixture to backplate. Ensure wires are concealed inside. For vertical applications, ensure the end of fixture with the fan is on the bottom.




3. Install the lower tube: align the tube so the groove faces the wall and slide over the metal tab. Press the tube up until it clicks. To remove, pull the metal tab inside the tube and slide down.

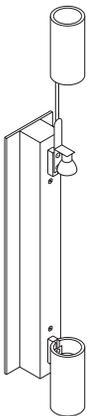

4. Align the top tube and position it over the upper metal tab: do not click into place.

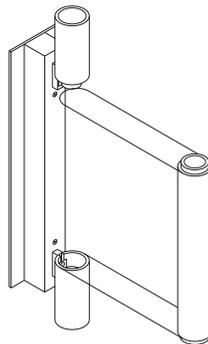

5. Insert the glass tube into the fixture so it rests on the lower metal tube. Be sure you have snapped the lower metal tube into place.

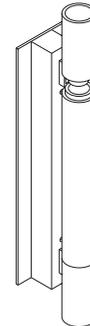

6. While holding the glass tube, push the top metal tube down until it clicks into place. The glass tube should be locked into place by the metal tubes.

Reverse the procedure to dismantle and to change the bulbs. **Be sure to hold the glass when dismantling to change bulbs.**