urban ARCHAEOLOGY

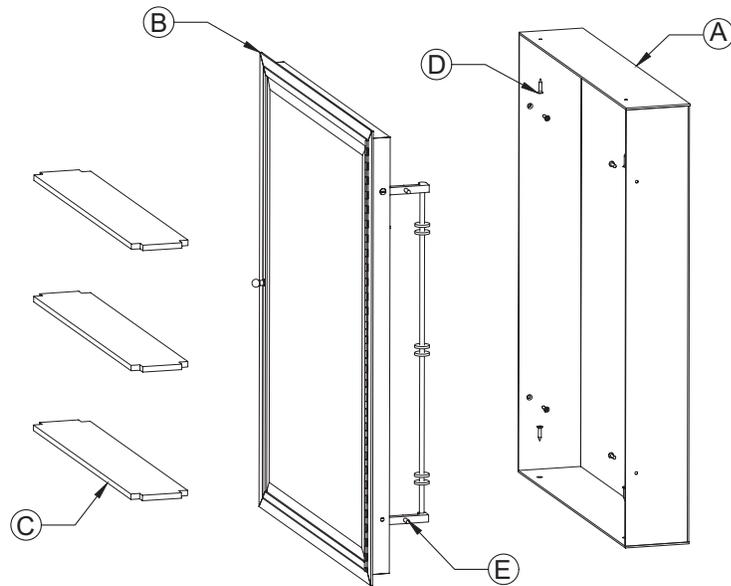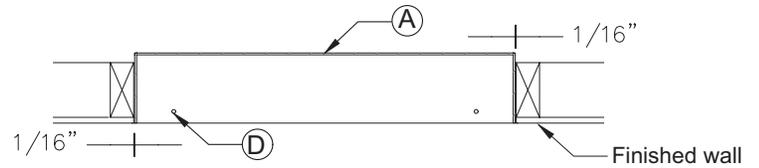## Lenox Cabinet — Installing Stainless Steel Box
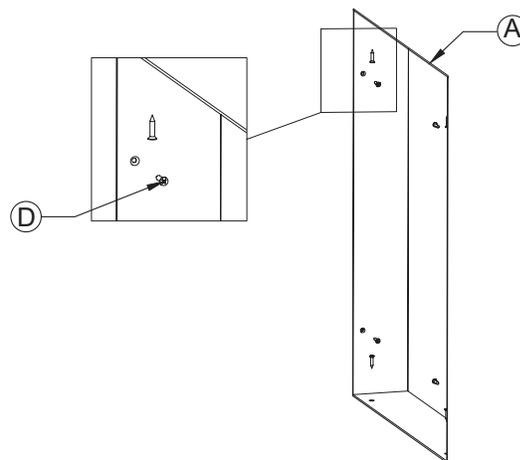
A. Stainless steel box
B. Door frame and shelf brackets
C. Glass shelves
D. Box screws
E. Bracket screws

1. The stainless steel box [A] is 1" smaller than the outside dimension of the frame [B] . The opening in the wall for the box is 1/8" larger than the outside dimension of the box, allowing a 1/16" gap on each side between the box and the blocking.
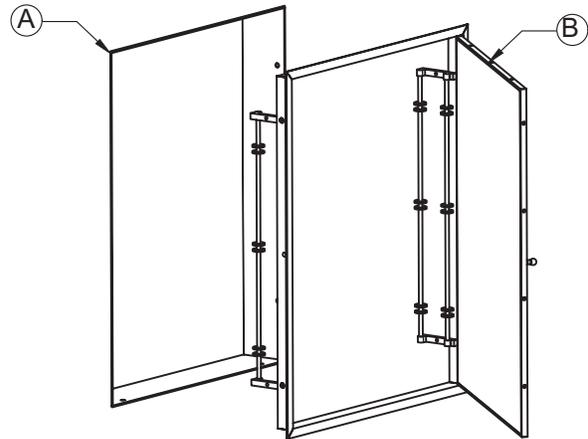
2. Set Box [A] in wall so front edge of box is flush with finished wall. Fasten with the box screws [D] the stainless steel box [A] from each side through the predrilled holes.
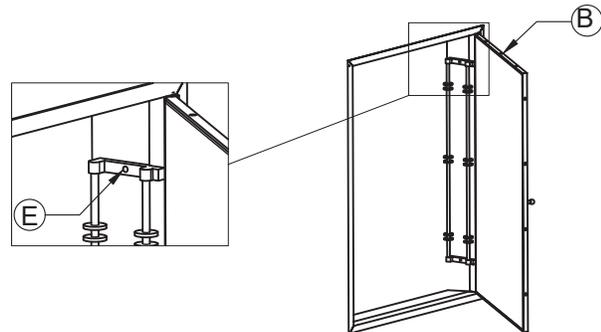
1/16"

1/16"

Finished wall

WWW.URBANARCHAEOLOGY.COM

REV 12.12.19

Lenox Cabinet — Installing Stainless Steel Box

3. Insert door frame [B] fully into the stainless steel   box [A] with the door open. Check alignment of the cabinet frame. Ensure door opens and close.

4. After insert the frame [B] drill the holes in the stainless steel box through the shelf brackets [E] and screw through it into the blocking.

5. Slide the glass shelves [C] between the Knurled washers and secure them.

Knurled washers